 
 

 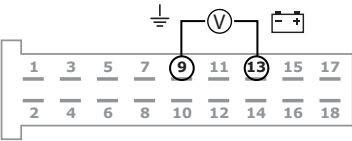



- 1) Laden Sie immer vollständig die aktuellste Einbau Anleitung von der ECS-Website herunter <https://catalogue.ecs-electronics.nl>
- 2) Den Anhängerstecker immer bei ausgeschalteter Zündung mit der Anhängersteckdose verbinden.
- 3) Testen Sie die Funktionen der Anhängersteckdose immer mit einem geeigneten Anhängerprüfgerät, Anhänger oder Fahrradträger. **LED-Prüfstecker ohne ausreichende Lampenlast sind nicht geeignet!**
- 4) Aufgrund der erforderlichen Anhängererkennung (Lasterkennung Anhängermodul) können die Funktionen der Anhängersteckdose nicht mit einem Voltmeter getestet werden.
- 5) Die Beleuchtung des Anhängers darf die in der Einbau Anleitung des E-Satzes angegebene maximale Leistung nicht überschreiten. Das Anhängermodul schaltet bei Überlast den entsprechenden Kanal bzw. die entsprechende Beleuchtungsfunktion ab (Sicherungsmodus).

					OK	NOT OK / CHECK	
1	 CONNECT	 CONNECT		Pos 9 Pos 13			
				Pos 9 Pos 14			
2	 DISCONNECT DISCONNECT	  DISCONNECT DISCONNECT		Pos 9 Pos 12			
				Pos 9 Pos 5			
				Pos 9 Pos 1			
				Pos 9 Pos 16	58L 		
				Pos 9 Pos 2	58R 		
				Pos 9 Pos 11	Reverse 		
				Pos 9 Pos 10	54G 1 		
				Pos 9 Pos 6	54G 2 		
				3	 CONNECT		
Pos 13 Pos 2							
Pos 13 Pos 3							
Pos 13 Pos 4	58L 						
Pos 13 Pos 6	58R 						
Pos 13 Pos 8	Reverse 						
Pos 13 Pos 10							

**FITTERS
TECHNICAL
SUPPORT**

**CALL
FREE
00800
2255
2327**

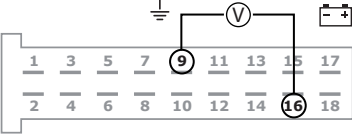

MONDAY TO FRIDAY

08.00 - 12.00

13.00 - 17.00

ts@ecs-electronics.nl
www.ecs-electronics.nl
tel: +31 (0)76 573 0020